

EXPERIMENT NO: - 01

AIM: - Installation and Configuration of Flutter Environment.


Step 1: Go to the official Flutter website: https://docs.flutter.dev/get-started/install

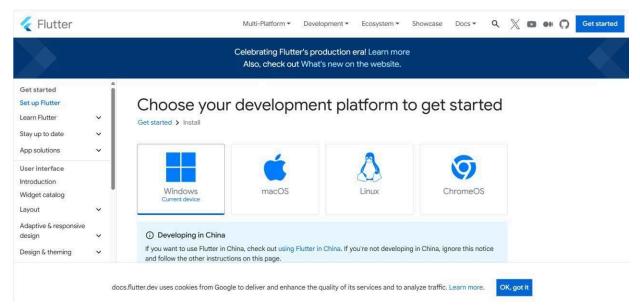


Step 2: To download the latest Flutter SDK, click on the Windows icon > Android

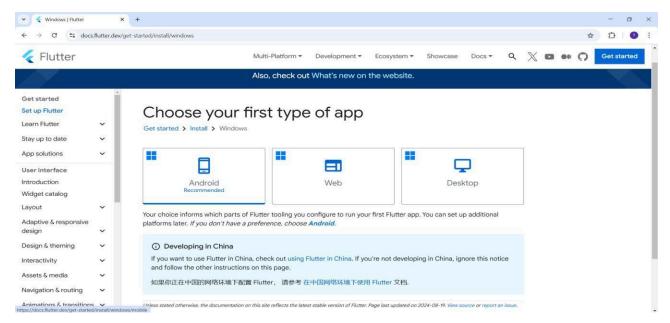


Step 3: For Windows, download the stable release (a .zip file).

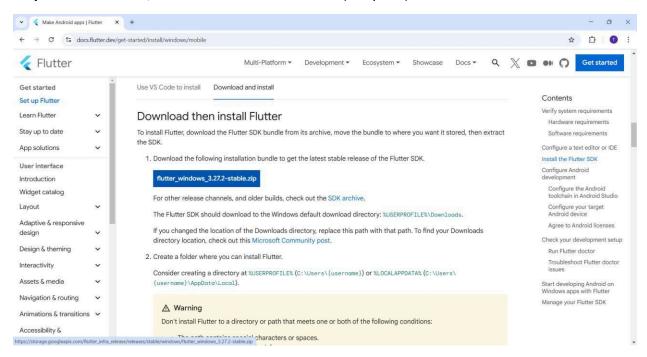

Step 4: Extract the ZIP file to a folder (e.g., C:\flutter).

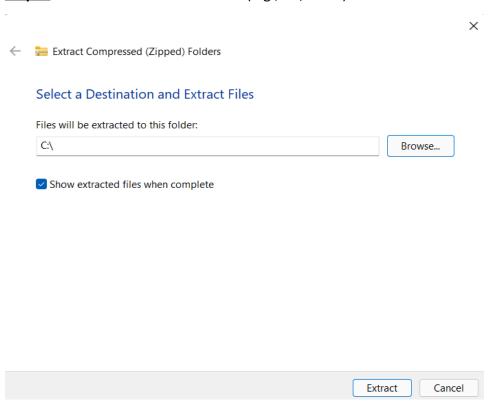

<u>Step 5 :-</u> Add Flutter to System PATH. Right-click on the Start Menu > System > Advanced system settings > Environment Variables. Under System Variables, find Path and click Edit. Add the full path to the flutter/bin directory (e.g., C:\flutter\bin).

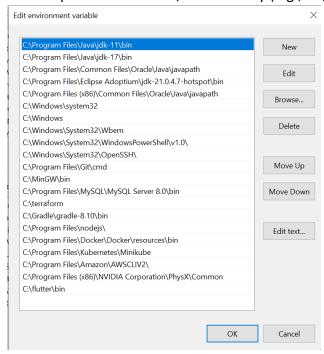

Step 6: - Now, run the \$ flutter command in command prompt.

```
X
 Command Prompt - flutter
Microsoft Windows [Version 10.0.19045.5247]
(c) Microsoft Corporation. All rights reserved.
C:\Users\ACER>$flutter
'$flutter' is not recognized as an internal or external command,
operable program or batch file.
C:\Users\ACER>flutter
Manage your Flutter app development.
Common commands:
  flutter create <output directory>
    Create a new Flutter project in the specified directory.
 flutter run [options]
    Run your Flutter application on an attached device or in an emulator.
Jsage: flutter <command> [arguments]
Global options:
                                Print this usage information.
-h, --help
                               Noisy logging, including all shell commands executed.


If used with "--help", shows hidden options. If used with "flutter doctor", shows additional diagnostic information. (Use "-vv" to force verbose logging in those cases.)
-v, --verbose
-d, --device-id
                                Target device id or name (prefixes allowed).
                                Reports the version of this tool.
    --version
    --enable-analytics
                                Enable telemetry reporting each time a flutter or dart command runs.
    --disable-analytics
                               Disable telemetry reporting each time a flutter or dart command runs, until it is
```

Step 7:- Run the \$ flutter doctor command. This command checks for all the requirements of Flutter app development and displays a report of the status of your Flutter installation


Class:- D15A




Step 8: - Go to Android Studio and download the installer.

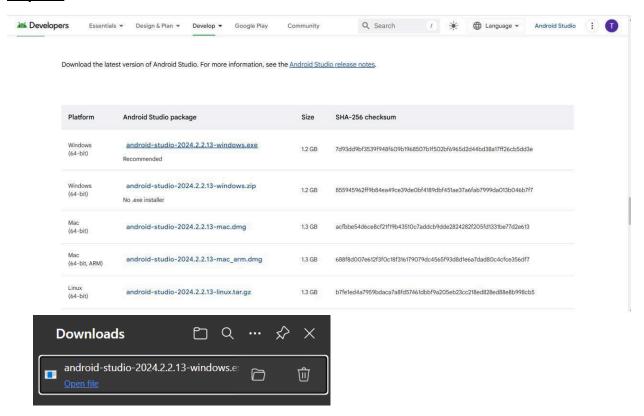

Step 8.1: - When the download is complete, open the .exe file and run it. You will get the following dialog box

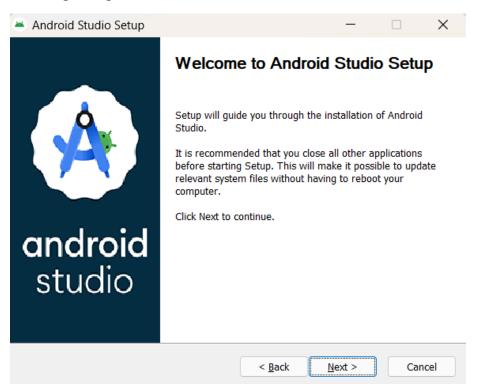


Step 8.2: - Select all the Checkboxes and Click on 'Next' Button.

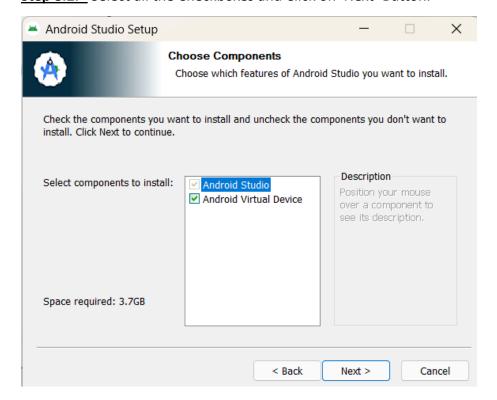



Step 8.3: - Change the destination as per your convenience and click on 'Next' Button.

Class:- D15A

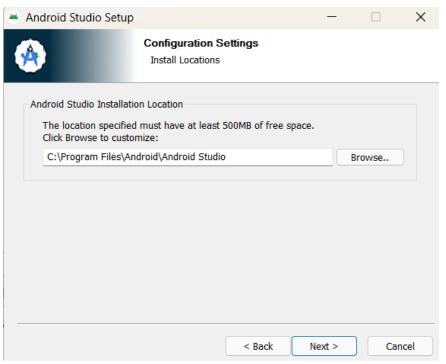


<u>Step 8.4:</u> - Follow the steps of the installation wizard. Once the installation wizard completes, you will get the following screen.

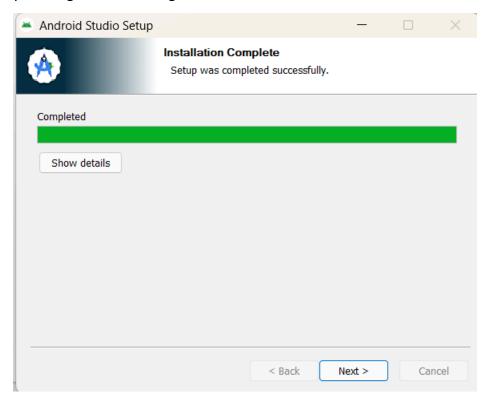

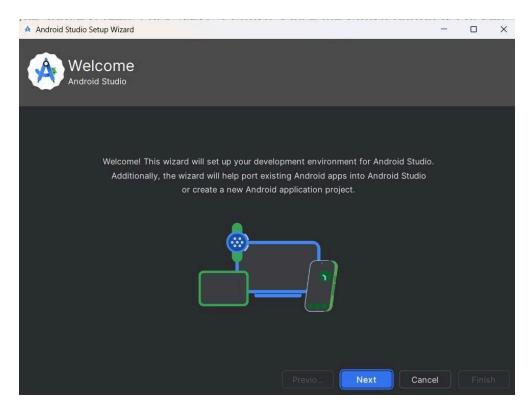

<u>Step 8.5:</u> Go to Preferences > Appearance & Behavior > System Settings > Android SDK. Select the SDK Tools tab and check Android SDK Command-line Tools and Install it.

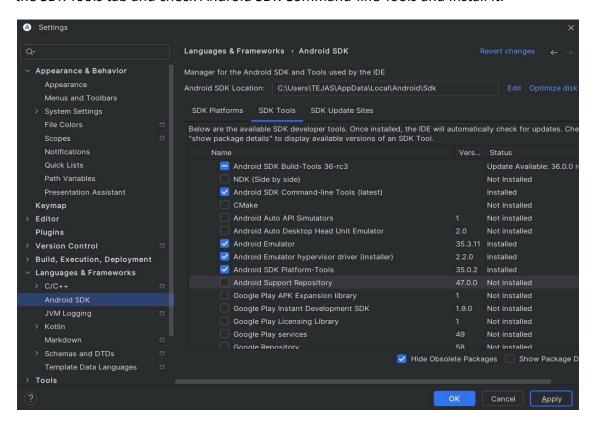

Step 9: - Open a terminal and run the following command

```
Doctor summary (to see all details, run flutter doctor -v):

[// Flutter (Channel stable, 3.27.2, on Microsoft Windows [Version 10.0.22631.4751], locale en-US)

[// Windows Version (Installed version of Windows is version 10 or higher)

[// Android toolchain - develop for Android devices (Android SDK version 35.0.1)

[// Chrome - develop for the web

[// Visual Studio - develop Windows apps (Visual Studio Community 2022 17.12.4)

X The current Visual Studio installation is incomplete.

Please use Visual Studio Installer to complete the installation or reinstall Visual Studio.

[// Android Studio (version 2024.2)

[// VS Code (version 1.96.4)

[// Connected device (3 available)

[// Network resources

1 Doctor found issues in 1 category.

C:\Users\TEJAS>flutter doctor
Doctor summary (to see all details, run flutter doctor -v):

[// Flutter (Channel stable, 3.27.2, on Microsoft Windows [Version 10.0.22631.4751], locale en-US)

[// Windows Version (Installed version of Windows is version 10 or higher)

[// Android toolchain - develop for Android devices (Android SDK version 35.0.1)

[// Chrome - develop for the web

[// Visual Studio - develop Windows apps (Visual Studio Community 2022 17.12.4)

[// Android Studio (version 2024.2)

[// VS Code (version 1.96.4)

[// Android Studio (version 2024.2)

[// VS Code (version 1.96.4)


[// Connected device (3 available)

[// Network resources


* No issues found!

C:\Users\TEJAS>
```

<u>Step 10: -</u> Next, you need to set up an Android emulator. It is responsible for running and testing the Flutter application

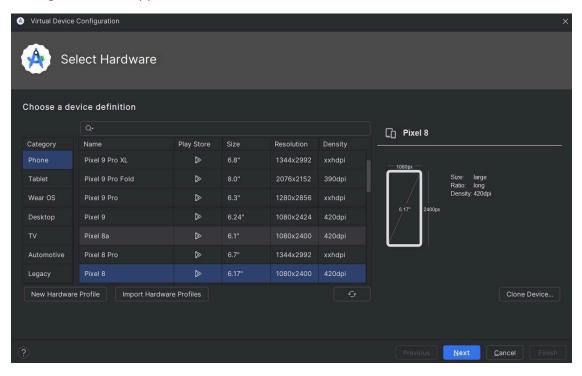

Step 10.1: - Open Android Studio and go to Tools > AVD Manager. Create a new virtual device.

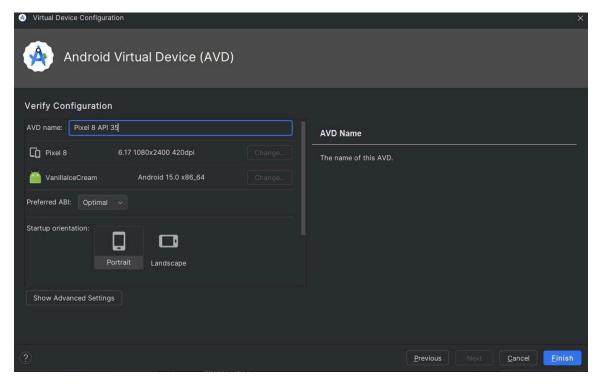

<u>Step 10.2: - Step 12: -</u> Go to File > New Project > Create Flutter Project, then select the project name and location, and click Next to proceed. Click on the icon pointed into the red color rectangle. The Android emulator displayed as below screen



